



Expertise in Ventilation

*Get the right fan for the job!*

## VZ6-4PL Installation Instructions

This product requires a 4 pin plug base with a permanent active to be installed within proximity of the fan by a licenced electrician.

To install the VZ6-4PL follow these steps:

1. Fix the unit in a safe location within proximity of the 4 pin plug base.
2. Plug the VZ6-4PL into the 4 pin plug base.
3. Plug the fan into the VZ6-4PL.
4. The fan will continue to run for the defined period after it has been turned off.

### CAUTION

Always remember that when the plug & lead is fitted to the remote plug base, the contents of the box are live even when the fan is turned off.

Product by: Fantech Pty. Ltd.

Melbourne (03) 8545 2345 Sydney (02) 8811 0400 Adelaide (08) 8377 0502 Auckland (09) 444 6266



Expertise in Ventilation

*Get the right fan for the job!*

## VZ6-4PL Installation Instructions

This product requires a 4 pin plug base with a permanent active to be installed within proximity of the fan by a licenced electrician.

To install the VZ6-4PL follow these steps:

1. Fix the unit in a safe location within proximity of the 4 pin plug base.
2. Plug the VZ6-4PL into the 4 pin plug base.
3. Plug the fan into the VZ6-4PL.
4. The fan will continue to run for the defined period after it has been turned off.

### CAUTION

Always remember that when the plug & lead is fitted to the remote plug base, the contents of the box are live even when the fan is turned off.

Product by: Fantech Pty. Ltd.

Melbourne (03) 8545 2345 Sydney (02) 8811 0400 Adelaide (08) 8377 0502 Auckland (09) 444 6266



Expertise in Ventilation

*Get the right fan for the job!*

## VZ6-4PL Installation Instructions

This product requires a 4 pin plug base with a permanent active to be installed within proximity of the fan by a licenced electrician.

To install the VZ6-4PL follow these steps:

1. Fix the unit in a safe location within proximity of the 4 pin plug base.
2. Plug the VZ6-4PL into the 4 pin plug base.
3. Plug the fan into the VZ6-4PL.
4. The fan will continue to run for the defined period after it has been turned off.

### CAUTION

Always remember that when the plug & lead is fitted to the remote plug base, the contents of the box are live even when the fan is turned off.

Product by: Fantech Pty. Ltd.

Melbourne (03) 8545 2345 Sydney (02) 8811 0400 Adelaide (08) 8377 0502 Auckland (09) 444 6266



Expertise in Ventilation

*Get the right fan for the job!*

## VZ6-4PL Installation Instructions

This product requires a 4 pin plug base with a permanent active to be installed within proximity of the fan by a licenced electrician.

To install the VZ6-4PL follow these steps:

1. Fix the unit in a safe location within proximity of the 4 pin plug base.
2. Plug the VZ6-4PL into the 4 pin plug base.
3. Plug the fan into the VZ6-4PL.
4. The fan will continue to run for the defined period after it has been turned off.

### CAUTION

Always remember that when the plug & lead is fitted to the remote plug base, the contents of the box are live even when the fan is turned off.

Product by: Fantech Pty. Ltd.

Melbourne (03) 8545 2345 Sydney (02) 8811 0400 Adelaide (08) 8377 0502 Auckland (09) 444 6266