



## VA2.0 / VZ6-4PL Installation Instructions

This product requires a 4 pin plug base with a permanent active to be installed within proximity of the fan by a licenced electrician.

To install the VA2.0 / VZ6-4PL follow these steps:

1. Fix the unit in a safe location within proximity of the 4 pin plug base.
2. Plug the VA2.0 / VZ6-4PL into the 4 pin plug base.
3. Plug the fan into the VA2.0 / VZ6-4PL.
4. Rotate black knob to adjust the fan speed and achieve the desired exhaust air flow rate. The fan will continue running for the defined period after it has been turned off.

### CAUTION

Always remember that when the plug & lead is fitted to the remote plug base, the contents of the box are live even when the fan is turned off.

Product by: Fantech Pty. Ltd.

Melbourne (03) 8545 2345 Sydney (02) 8811 0400 Adelaide (08) 8377 0502 Auckland (09) 444 6266



## VA2.0 / VZ6-4PL Installation Instructions

This product requires a 4 pin plug base with a permanent active to be installed within proximity of the fan by a licenced electrician.

To install the VA2.0 / VZ6-4PL follow these steps:

1. Fix the unit in a safe location within proximity of the 4 pin plug base.
2. Plug the VA2.0 / VZ6-4PL into the 4 pin plug base.
3. Plug the fan into the VA2.0 / VZ6-4PL.
4. Rotate black knob to adjust the fan speed and achieve the desired exhaust air flow rate. The fan will continue running for the defined period after it has been turned off.

### CAUTION

Always remember that when the plug & lead is fitted to the remote plug base, the contents of the box are live even when the fan is turned off.

Product by: Fantech Pty. Ltd.

Melbourne (03) 8545 2345 Sydney (02) 8811 0400 Adelaide (08) 8377 0502 Auckland (09) 444 6266



## VA2.0 / VZ6-4PL Installation Instructions

This product requires a 4 pin plug base with a permanent active to be installed within proximity of the fan by a licenced electrician.

To install the VA2.0 / VZ6-4PL follow these steps:


1. Fix the unit in a safe location within proximity of the 4 pin plug base.
2. Plug the VA2.0 / VZ6-4PL into the 4 pin plug base.
3. Plug the fan into the VA2.0 / VZ6-4PL.
4. Rotate black knob to adjust the fan speed and achieve the desired exhaust air flow rate. The fan will continue running for the defined period after it has been turned off.

### CAUTION

Always remember that when the plug & lead is fitted to the remote plug base, the contents of the box are live even when the fan is turned off.

Product by: Fantech Pty. Ltd.

Melbourne (03) 8545 2345 Sydney (02) 8811 0400 Adelaide (08) 8377 0502 Auckland (09) 444 6266

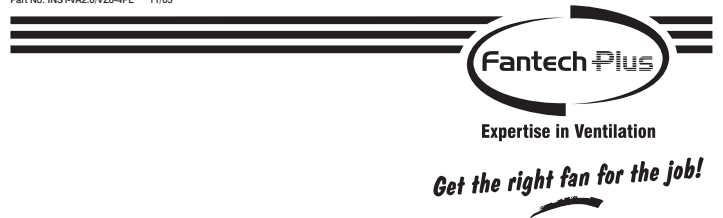

## VA2.0 / VZ6-4PL Installation Instructions

This product requires a 4 pin plug base with a permanent active to be installed within proximity of the fan by a licenced electrician.

To install the VA2.0 / VZ6-4PL follow these steps:

1. Fix the unit in a safe location within proximity of the 4 pin plug base.
2. Plug the VA2.0 / VZ6-4PL into the 4 pin plug base.
3. Plug the fan into the VA2.0 / VZ6-4PL.
4. Rotate black knob to adjust the fan speed and achieve the desired exhaust air flow rate. The fan will continue running for the defined period after it has been turned off.

### CAUTION

Always remember that when the plug & lead is fitted to the remote plug base, the contents of the box are live even when the fan is turned off.

Product by: Fantech Pty. Ltd.

Melbourne (03) 8545 2345 Sydney (02) 8811 0400 Adelaide (08) 8377 0502 Auckland (09) 444 6266